



Installation Instructions Laminate flooring

CLASSEN

Megaloc aqua protect installation system in plank format
with integrated impact sound insulation



Rev. 8.0 / 11.23

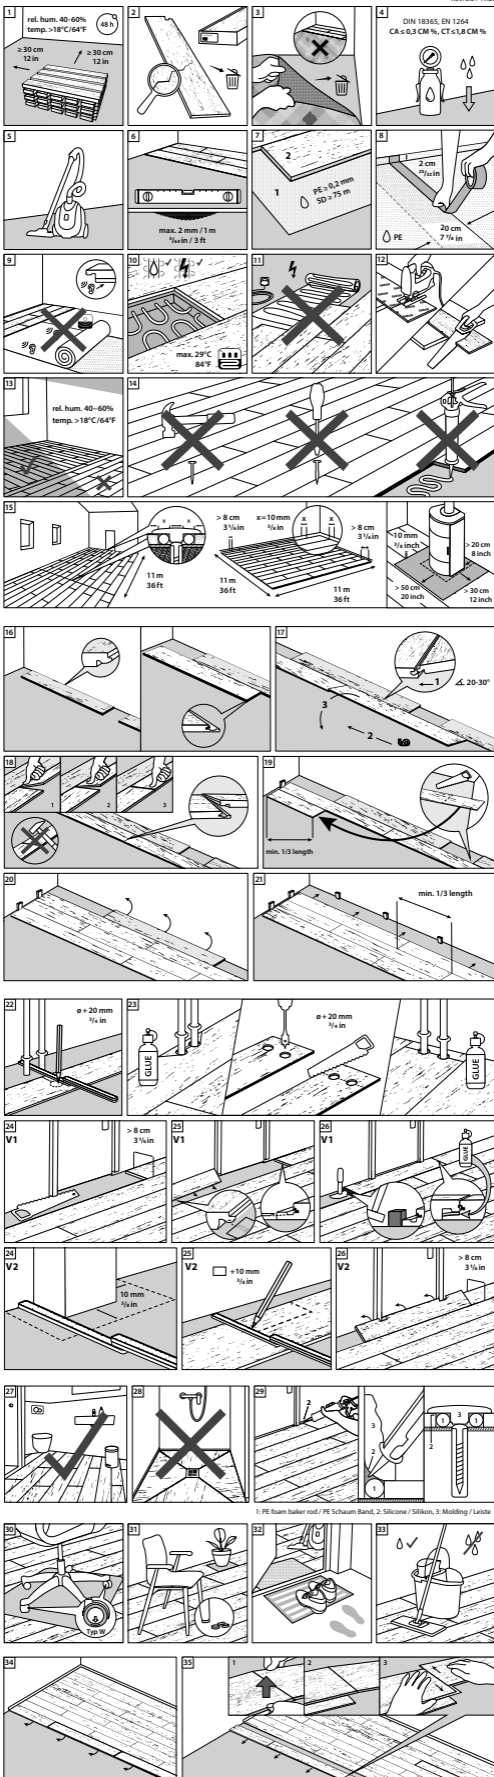

1: PE foam baker rod / PE Schaum Band, 2: Silicone / Silikon, 3: Molding / Leiste



QR code to the

- Installation instructions in text form
- Cleaning and maintenance instructions
- Technical data sheets
- Product certificates